



Model: BC-050S-11S

- Insertion Loss  
(Input / Output)

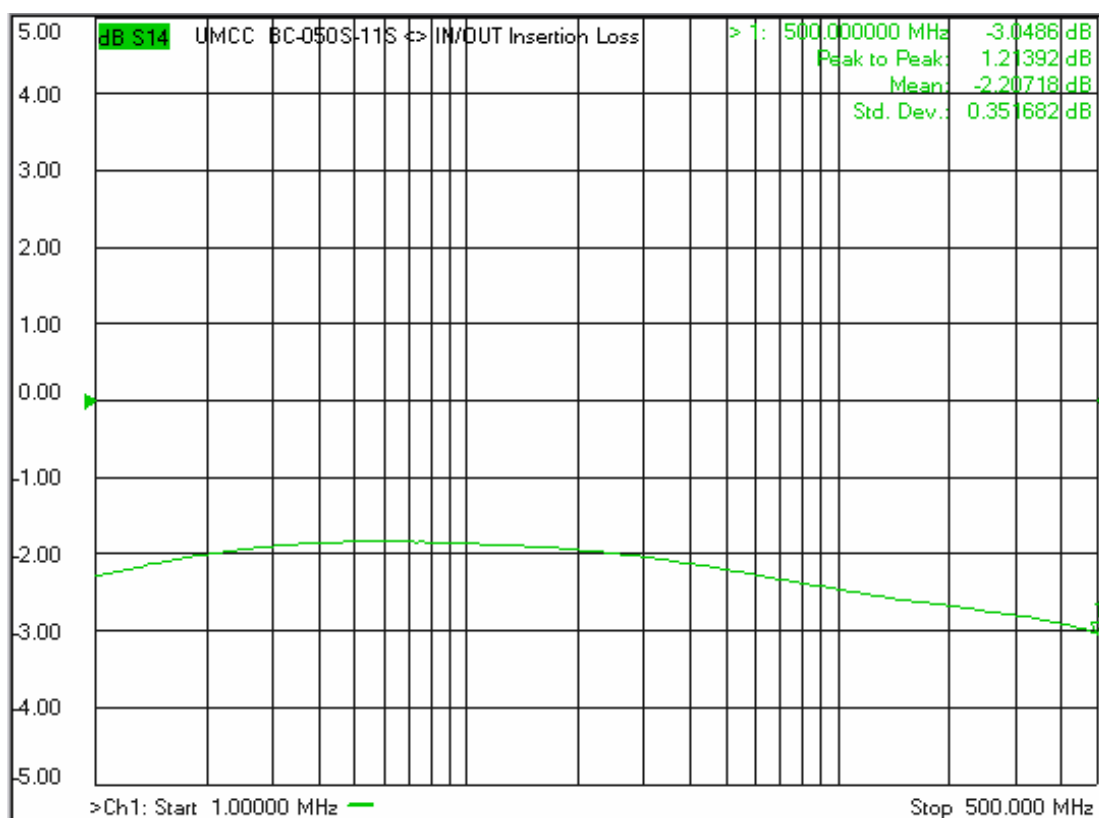


- Coupling  
(Cpl-In & Cpl-Out)

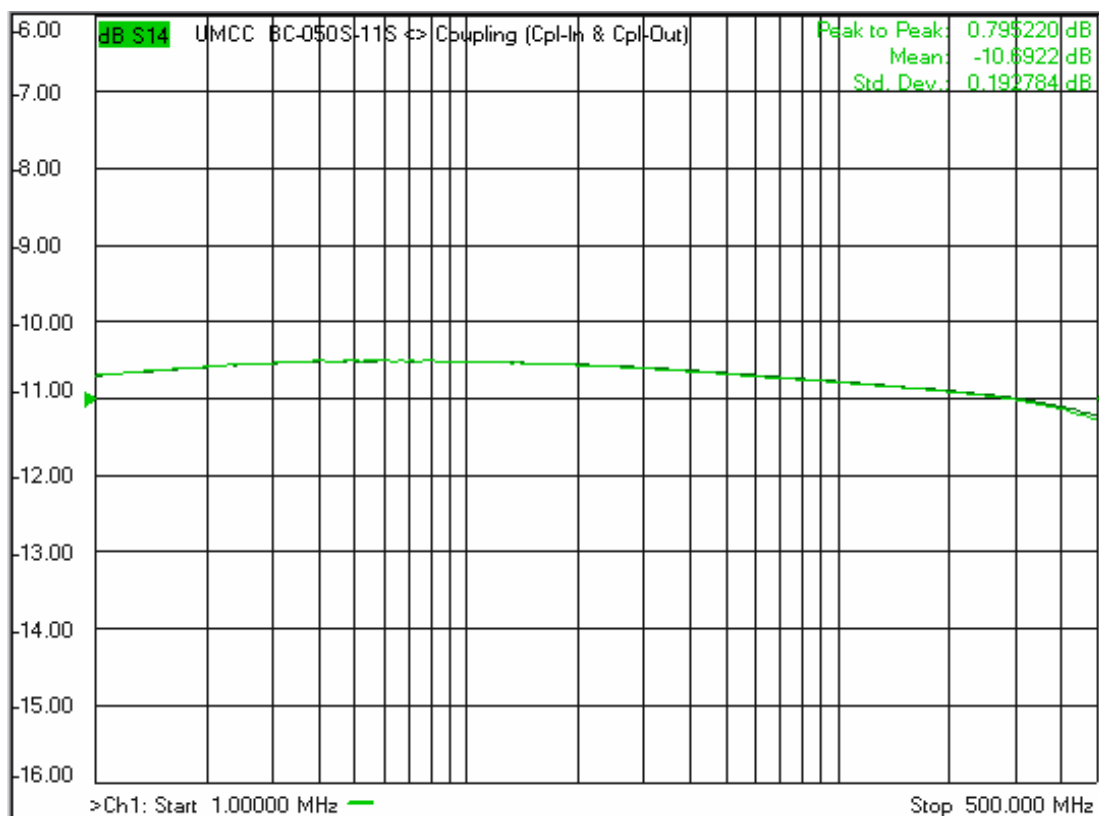

Model: BC-050S-11S

**- Return Loss**

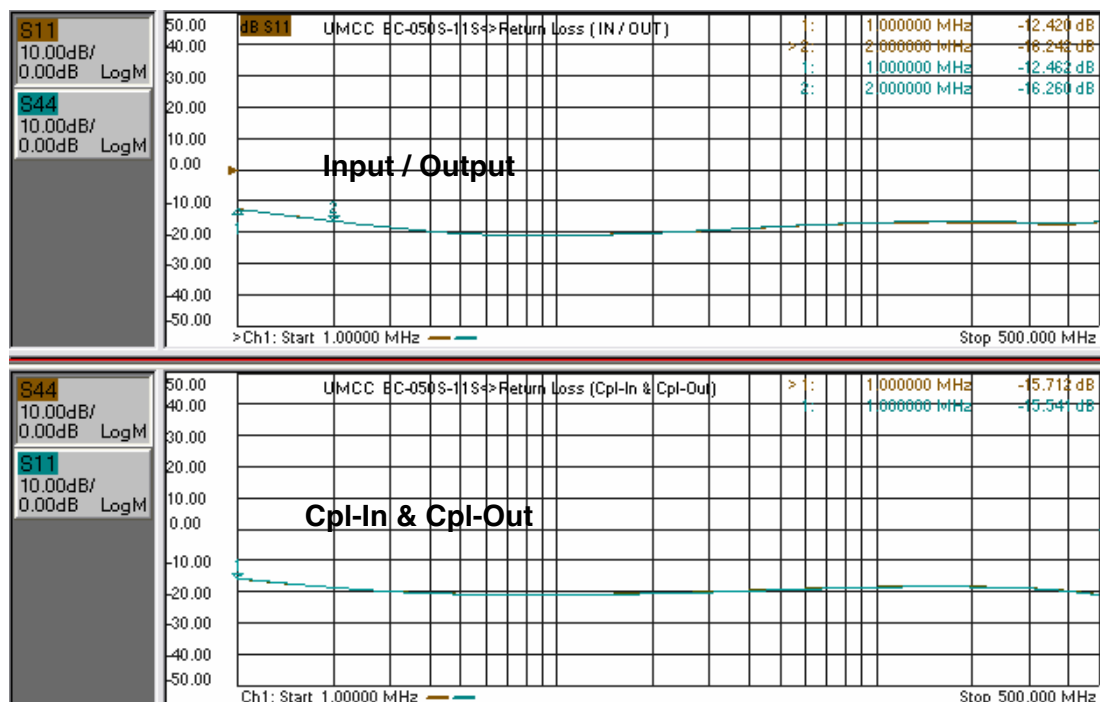

**- Directivity**

