



Model: PS-5000-2S

-Insertion Loss

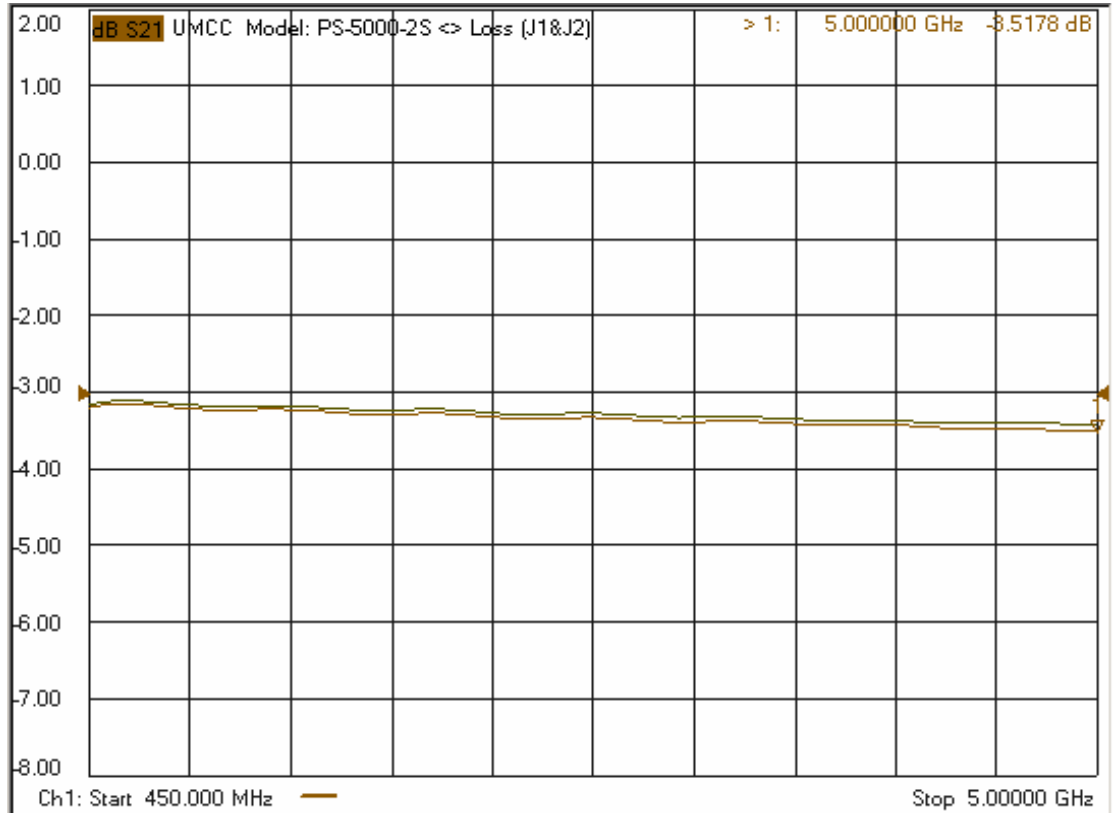


-Return Loss

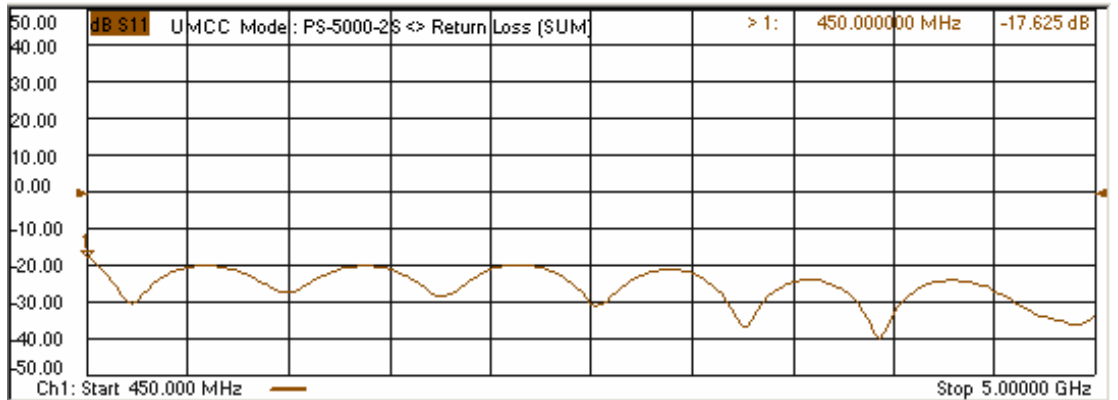

Model: PS-5000-2S

-Isolation

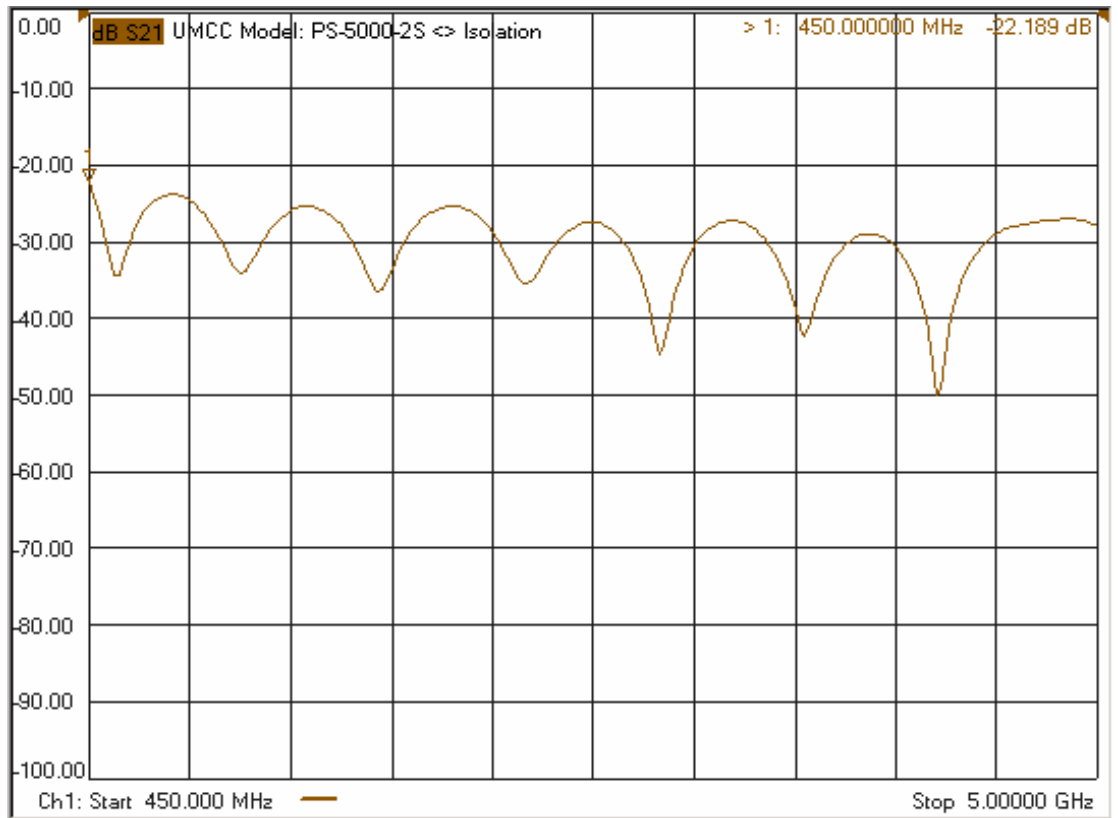

-Phase Error

